












 
 


# BREAKER SELECTOR

BREAKER TYPE	Wattage (W)	Weight (kg)	Impact energy (J)	Working Direction	Connection End	Impact speed (impacts per minute)	Remove plaster / tiles	Wall Penetration	Concrete repair	Channelling	Demolition	Floor Renovation	Road Building
<b>TE 800-AVR</b> 	1850	10.6	21			1890							
<b>TE 1000-AVR</b> 	1750	12.5	26			1950							
<b>TE 1500-AVR</b> 	1800	14.2	30			1620							
<b>TE 2000-AVR</b> 	2100	14.8				1800							
<b>TE 3000-AVR</b> 	2070	29.9	68			860							